





Quick Start Guide

2.8-inch Visible Light Product

Version: 1.0

Date: August 2019

1. Overview

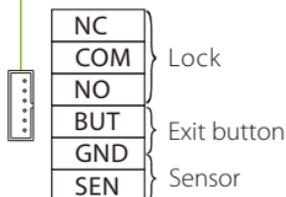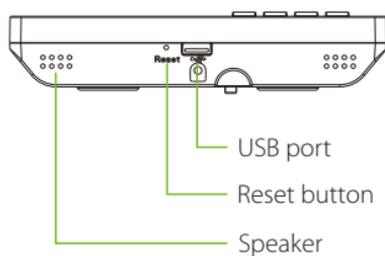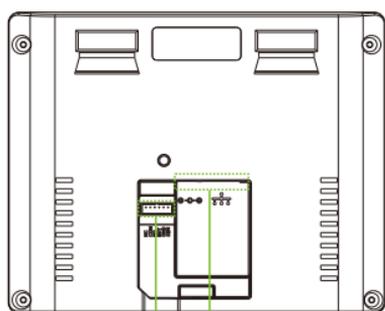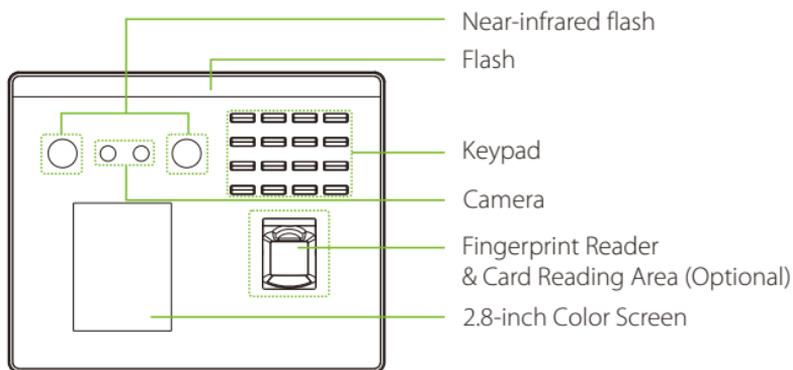


2. Device Installation


❖ Install on the wall

- ① Attach the mounting template sticker to the wall, and drill holes according to the mounting paper.
- ② Fix the back plate on the wall using wall mounting screws.
- ③ Attach the device to the back plate from top to bottom.
- ④ Fasten the device to the back plate with a security screw.


1

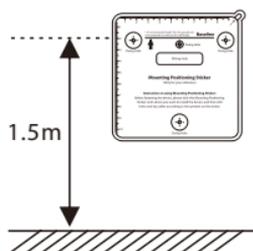


2

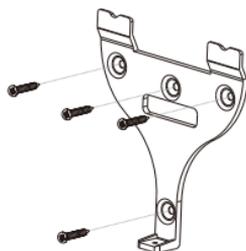


3

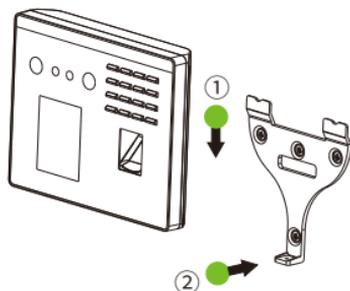


4

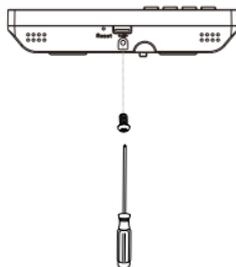

3. Standalone Installation

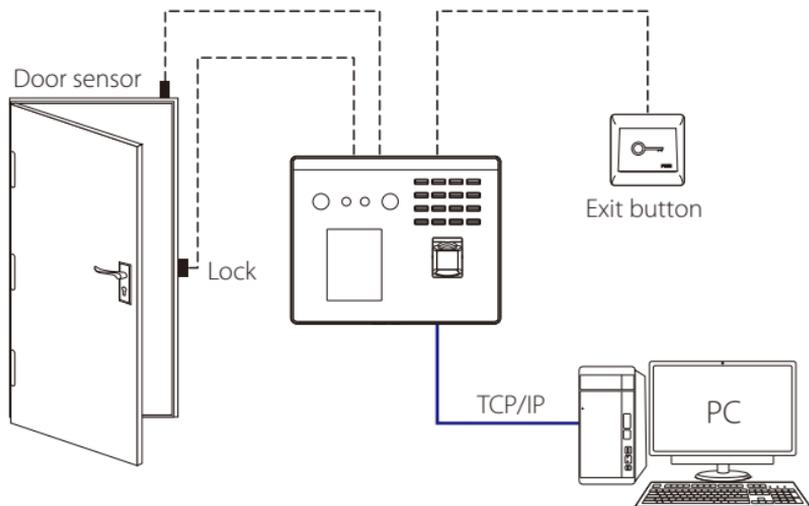


4. Door Sensor & Exit Button Connection

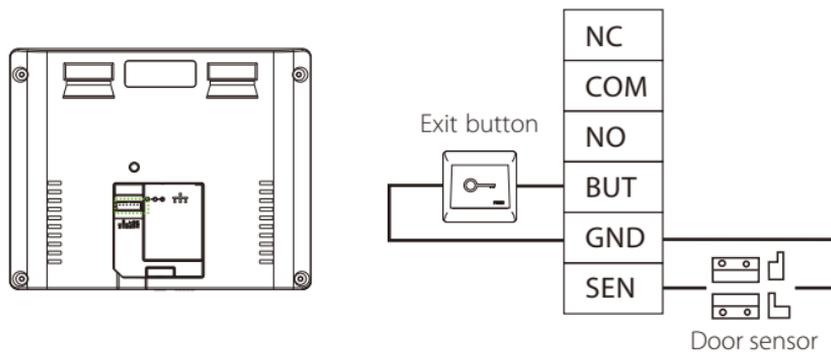


5. Lock Relay Connection

The system supports Normally Opened Lock and Normally Closed Lock. The NO LOCK (normally unlocked when power-on) is connected with 'NO' and 'COM' terminals, and the NC LOCK (normally locked when power-on) is connected with 'NC' and 'COM' terminals. Take NC Lock as an example below:

Not sharing power with the lock

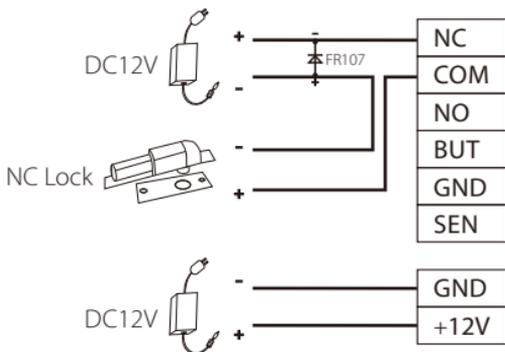


6. Power Connection

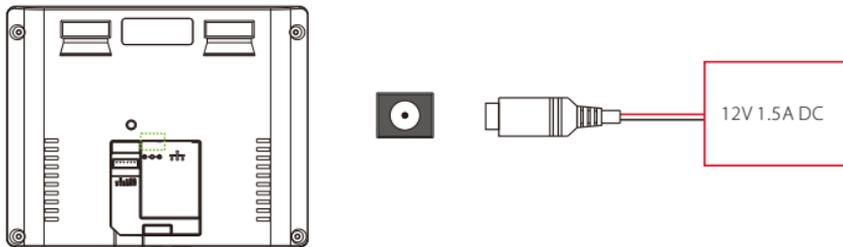


- Recommended power supply: 12V - 1.5A
- To share the power with other devices, use a power supply with higher current ratings.

7. Ethernet Connection

Connect the device and computer software over an Ethernet cable. An example is shown below:

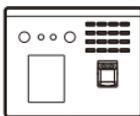

Default IP address: 192.168.1.201
Subnet mask: 255.255.255.0

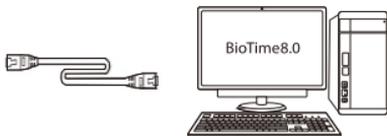

IP address: 192.168.1.130
Subnet mask: 255.255.255.0

Note: In LAN, IP addresses of the server (PC) and the device must be in the same network segment when connecting to BioTime 8.0 software.

Click on [Comm.] > [Ethernet] > [IP Address], input the IP address and click on [OK].

8. Quick Start



User registration

a. Register on the device

Click [M/OK] > Main Menu > User Mgt. to register new user. Enter user name, ID, verification mode, register face, fingerprint, password and user photo.

Main Menu	

User Mgt.	
	New User
	All Users
	Display Style


New User	
User ID	1
Name	
User Role	Normal User
Verification Mode	Password/Fingerprint/Face
Fingerprint	0
Face	0

b. Register on the software (BioTime 8.0)

Please set the IP address and cloud service server address on the device.

1. Click [Device] > [Device] > [Add] to add the device to the software.

When the device has set the server address and port, it can be added automatically.

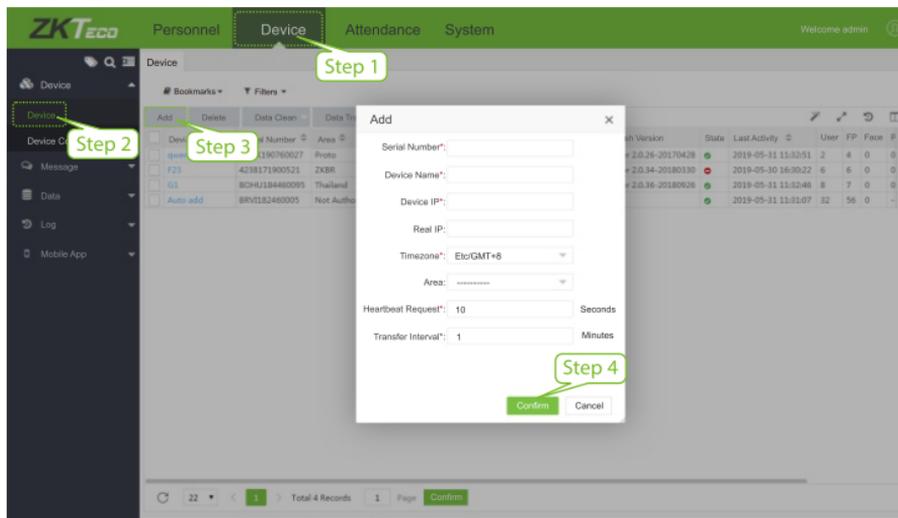

2. Click [Personnel] > [Employee] > [Employee] > [Add] to register users in the software.

3. Synchronize personnel on the software to devices in the corresponding area.

4. In the personnel list, select an employee (or employees) and click [More] > [Synchronize to Device] to access the confirmation interface for synchronizing.

For more details, please refer to the BioTime 8.0 User Manual.


c. Register on the phone

Once BioTime 8.0 software installation, users could enroll face via browser application on their own mobile phone.

Register visible light comparison photos to verify and punch on the visible light device.


1. Choose [Personnel] > [Employee] > [Bio-photo] > [QR Code] to access the QR Code getting interface.

2. Scan the QR code via browser APP and enroll face user, user could input the http://server_ip_address:server_port/v1Register/ on the browser APP manually as well. The following interface is entered after successful scanning:

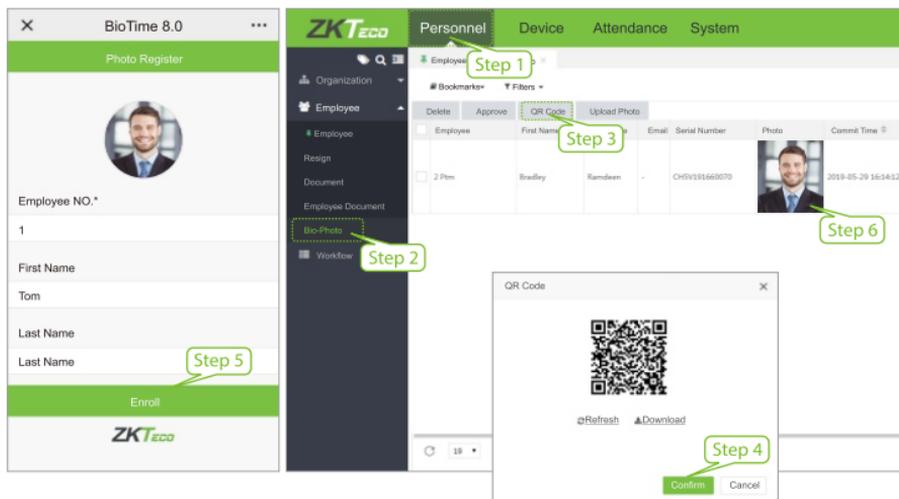

User Authentication

Terminal could detect face in 0.3m to maximum 1.5m distance. The device switches to face verification interface automatically once it detect bright of environment change. The verification result shows as right image.

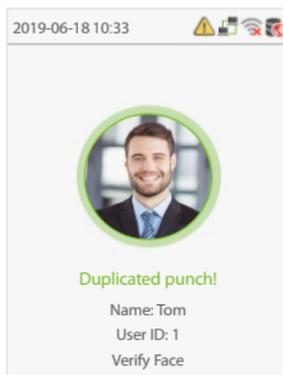


View records

View records on the software

Click [Attendance] > [Report] on the software to view the records.

9. Access Control Settings

Click on [M/OK] > [Access Control] to enter the access control management interface and set relevant parameters of access control.

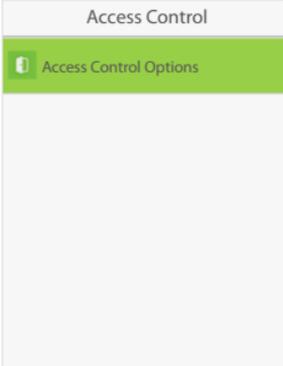Main Menu	Access Control	Access Control Options												
		<table border="1"><thead><tr><th colspan="2">Access Control Options</th></tr></thead><tbody><tr><td>Door Lock Delay (s)</td><td>10</td></tr><tr><td>Door Sensor Delay (s)</td><td>10</td></tr><tr><td>Door Sensor Type</td><td>Normal Close (NC)</td></tr><tr><td>Door Alarm Delay (s)</td><td>30</td></tr><tr><td>Speaker Alarm</td><td><input type="checkbox"/></td></tr></tbody></table>	Access Control Options		Door Lock Delay (s)	10	Door Sensor Delay (s)	10	Door Sensor Type	Normal Close (NC)	Door Alarm Delay (s)	30	Speaker Alarm	<input type="checkbox"/>
Access Control Options														
Door Lock Delay (s)	10													
Door Sensor Delay (s)	10													
Door Sensor Type	Normal Close (NC)													
Door Alarm Delay (s)	30													
Speaker Alarm	<input type="checkbox"/>													

10. Ethernet and Cloud Server Settings

Click on [M/OK] > [Comm.] > [Ethernet] to set the network parameters. If the TCP/IP communication of the device is successful, the icon  will be displayed in the upper right corner of the standby interface.

Click on [M/OK] > [Comm.] > [Cloud Server Setting] to set the server address and server port, that is, the IP address and port number of the server after the software is installed. If the device communicates with the server successfully, the icon  will be displayed in the upper right corner of the standby interface.

Main Menu	Ethernet	Cloud Server Setting																										
	<table border="1"><thead><tr><th colspan="2">Ethernet</th></tr></thead><tbody><tr><td>IP Address</td><td>192.168.1.201</td></tr><tr><td>Subnet Mask</td><td>255.255.255.0</td></tr><tr><td>Gateway</td><td>0.0.0.0</td></tr><tr><td>DNS</td><td>0.0.0.0</td></tr><tr><td>TCP COMM. Port</td><td>4370</td></tr><tr><td>DHCP</td><td><input type="checkbox"/></td></tr></tbody></table>	Ethernet		IP Address	192.168.1.201	Subnet Mask	255.255.255.0	Gateway	0.0.0.0	DNS	0.0.0.0	TCP COMM. Port	4370	DHCP	<input type="checkbox"/>	<table border="1"><thead><tr><th colspan="2">Cloud Server Setting</th></tr></thead><tbody><tr><td>Server mode</td><td>ADMS</td></tr><tr><td>Enable Domain Name</td><td></td></tr><tr><td>Server Address</td><td>0.0.0.0</td></tr><tr><td>Server Port</td><td>8081</td></tr><tr><td>Enable Proxy Server</td><td><input type="checkbox"/></td></tr></tbody></table>	Cloud Server Setting		Server mode	ADMS	Enable Domain Name		Server Address	0.0.0.0	Server Port	8081	Enable Proxy Server	<input type="checkbox"/>
Ethernet																												
IP Address	192.168.1.201																											
Subnet Mask	255.255.255.0																											
Gateway	0.0.0.0																											
DNS	0.0.0.0																											
TCP COMM. Port	4370																											
DHCP	<input type="checkbox"/>																											
Cloud Server Setting																												
Server mode	ADMS																											
Enable Domain Name																												
Server Address	0.0.0.0																											
Server Port	8081																											
Enable Proxy Server	<input type="checkbox"/>																											

ZK Building, Wuhe Road, Gangtou, Bantian, Buji Town,
Longgang District, Shenzhen China 518129
Tel: +86 755-89602345
Fax: +86 755-89602394
www.zkteco.com

