

QUICK START GUIDE

Applicable Models: ProCapture-WP

Version: 1.1

Date: May 2020



Safety Precautions

Before installation, please read the following safety precautions for user safety and to prevent product damage.



Do not install the device in a place subject to direct sun light, humidity, dust or soot.



Do not place a magnet near the product. Magnetic objects such as magnet, CRT, TV, monitor or speaker may damage the device.



Do not place the device next to heating equipment.



Do not to let liquid like water, drinks or chemicals leak inside the device.



Do not let children touch the device without supervision.



Do not drop or damage the device.



Do not disassemble, repair or alter the device.




Do not use the device for any purpose other than those specified.




Clean the device often to remove dust on it. In cleaning, do not splash water on the device but wipe it out with smooth cloth or towel.

Contact your supplier in case of a problem!

Device Overview

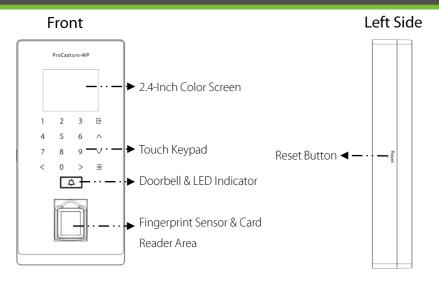



Back

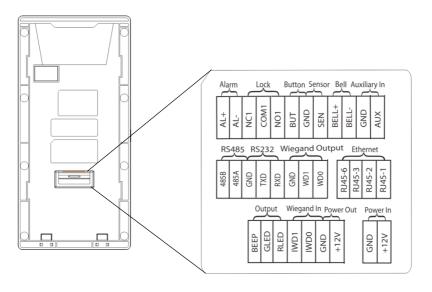


Product Dimensions & Installation

Product Dimensions

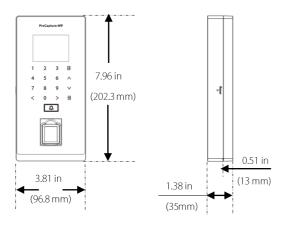

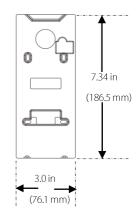

Mounting the Device on Wall



1 Fix the back plate onto the wall using wall mounting screws.

Note: We recommend drilling the mounting plate screws into

Note: We recommend drilling the mounting plate screws into solid wood (i.e. stud/beam). If a stud/beam cannot be found, use supplied drywall plastic anchors.



2 Insert the device to back plate.




3 Use security screws to fasten the device to back plate.


Note: To effectively protect the device from water and dust, ProCapture-WP must be installed vertically perpendicular to the ground.

Power Connection

Without UPS

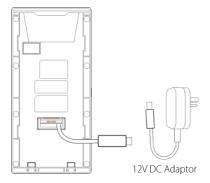

With UPS (Optional)

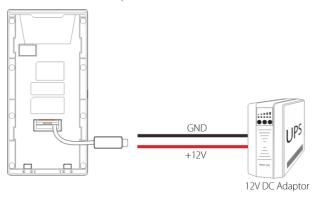


Recommended Power Supply

- 12V±10%, at least 500MA.
- To share the power with other devices, use a power supply with higher current ratings.

Ethernet Connection


LAN Connection

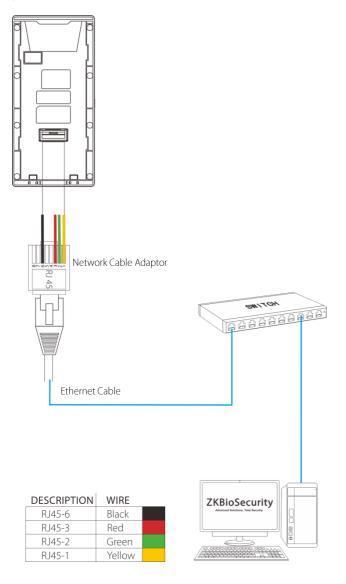

Note: The device can be connected to PC directly by Ethernet cable.

RS485 Connection

RS485 Fingerprint Reader Connection

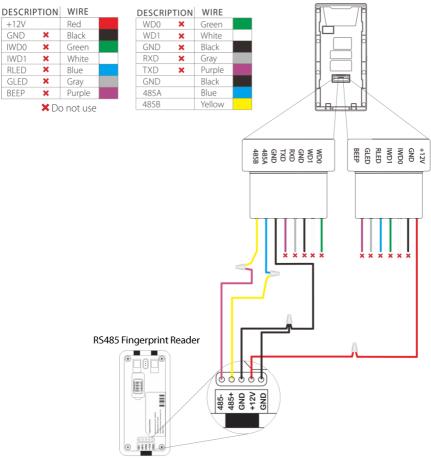


DIP Settings

- 1. There are six DIP switches on the back of RS485 fingerprint reader, switches 1-4 are for RS485 address, switch 5 is reserved, switch 6 is for reducing noise on long RS485 cable.
- 2. If RS485 fingerprint reader is powered from the terminal, the length of wire should be less than 100 meters or 330 ft.
- 3. If the cable length is more than 200 meters or 600 ft., the number 6 switch should be ON as below.



Lock Relay Connection


Device Not Sharing Power with the Lock

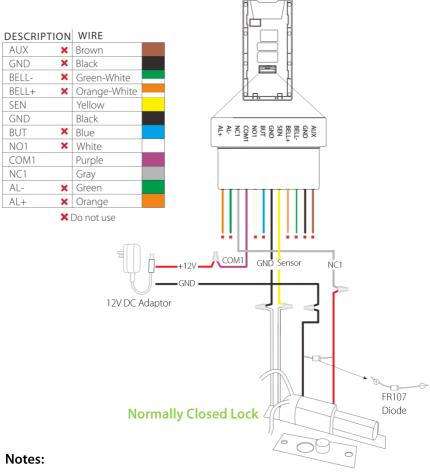

- The system supports NO LOCK and NC LOCK. For example the NO LOCK (normally opened at power on) is connected with 'NO1' and 'COM1' terminals, and the NC LOCK (normally closed at power on) is connected with 'NC1' and 'COM1' terminals.
- 2. When electrical lock is connected to the Access Control System, you must parallel one FR107 diode (equipped in the package) to prevent the self-inductance EMF from affecting the system.
 - ⚠Do not reverse the polarities.

Lock Relay Connection

Device Sharing Power with the Lock

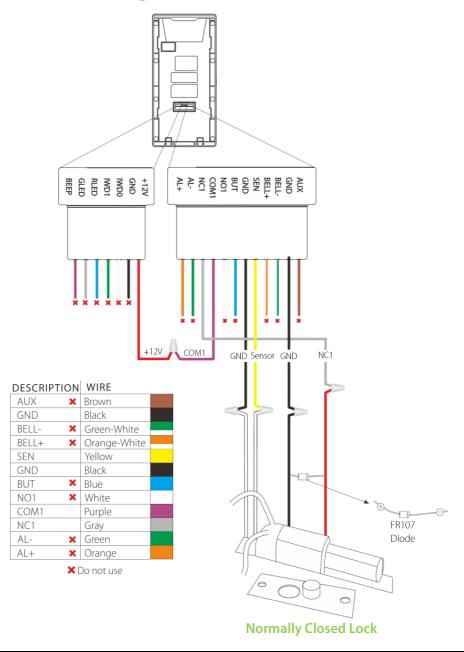

Wiegand Output Connection

WD0

WD1

GND


RXD

TXD


GND

485A

485B

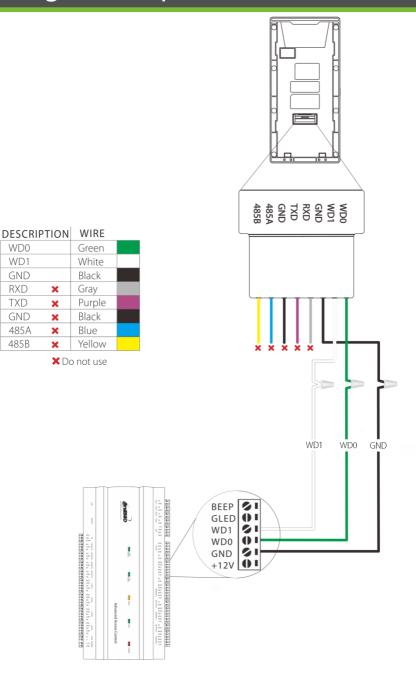

Standalone Installation

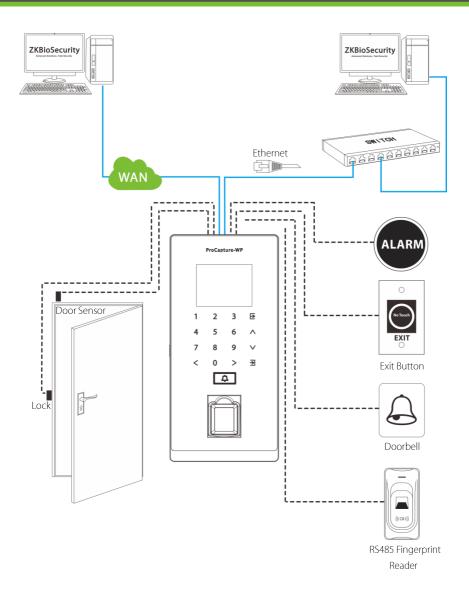

Device Operation

Date / Time Settings



Press → to enter the main menu and press > to select System > Date Time to set date and time.

Adding User



Press → to enter the main menu and select User Mgt. > New User to enter the adding New User interface.

Settings include inputting user ID, choosing user role (Super Admin / Normal User), registering fingerprint / badge number / password and setting access control role.

Ethernet Settings



Press \longrightarrow to enter the main menu and press \nearrow to select Comm. > Ethernet.

The Parameters below are the factory default values. Please adjust them according to the actual network.

IP Address: 192.168.1.201

Subnet Mask: 255.255.255.0

Gateway: 0.0.0.0

DNS: 0.0.0.0

TCP COMM. Port: 4370

DHCP: Dynamic Host Configuration Protocol, which is to dynamically allocate IP addresses for clients via server. If DHCP is enabled, IP cannot be set manually.

Display in Status Bar: To set whether to display the network connection icon in the status bar of initial interface.

Device Operation

ADMS Settings







Press \supseteq to enter the main menu and press > to select Comm. > ADMS, to set the parameters which are used for connecting with the ADMS server.

When the Webserver is connected successfully, the initial interface will display the 🔊 logo.

Server Address: Enter IP address of ADMS server (namely, IP address of server where software is installed).

Server Port: Enter Port number used by the ADMS server.

Enable Proxy Server: Method of enabling proxy. To enable proxy, please set the IP address and port number of the proxy server. Entering proxy IP and server address will be the same.

Note: To connect the device to ZKBioSecurity software, Ethernet and ADMS options must be set correctly.

Access Control Settings







Press \Rightarrow to enter the main menu and press > and \lor to select Access Control.

To gain access, the registered user must meet the following conditions:

- 1. User's access time falls within either user's personal time zone or group time zone.
- 2. User's group must be in the access combo (when there are other groups in the same access combo, verification of members of those groups are also required to unlock the door).

Access Control Options: To set parameters of the lock and other related devices.

Time Rule Setting: To set a maximum of 50 time rules. Each time rule consists of 10 spaces (7 spaces for one week and 3 holiday spaces), each space consists of 3 time periods.

Holidays: To set dates of holiday and the access control time zone for that holiday.

Combined Verification: To set access control combinations. A combination consists of a maximum of 5 access control groups.

Anti-Passback Setup: To prevent passing back which causes risks to security. Once it is enabled, entry and exit records must be matched in order to open door. In Anti-Passback, Out Anti-Passback and In / Out Anti-Passback functions are available.

Device Operation

Access Control Combination Settings

E.g.: Add an access control combination which requires 2 persons' verification from both group 1 (set in User Management) and group 2.





1. In "Access Control" interface, press ✓ to select "Combined Verification"; then press → to enter the "Combined Verification" list. Click the desired combination and press → to enter the modification interface (shown as in figure 2).

2. Click ∧ or ∨ to change the number, click < or > to switch editing box, set the user group number, and click → to save and return to "Combined Verification" list (as shown in figure 3).

Note: 1. A single Access Control Combination can consist of a maximum of 5 user groups (in order to open door, verification of all 5 users is required).

- 2. If the combination is set as shown in figure 4, a user from access group 2 must obtain verification of two users from access group 1 in order to open door.
- 3. Set all group number to zero to reset access control combination.

Troubleshooting

1. Fingerprint cannot be read or it takes too long?

- > Check whether a finger or fingerprint sensor is stained with sweat, water or dust.
- Retry after wiping off finger and fingerprint sensor with dry paper tissue or a mildly wet cloth.
- If a fingerprint is too dry, blow on the finger and retry.

2. "Invalid time zone" is displayed after verification?

Contact Administrator to check if the user has the privilege to gain access within that time zone.

3. Verification succeeds but the user cannot gain access?

- Check whether the user privilege is set correctly.
- Check whether the lock wiring is correct.
- Check whether anti-passback mode is in use. In anti-passback mode, only the person who has entered through that door can exit.

4. The Tamper Alarm rings?

To cancel the triggered alarm mode, carefully check whether the device and back plate are securely connected to each other, and reinstall the device properly if necessary.



ZKTeco Industrial Park, No. 26, 188 Industrial Road, Tangxia Town, Dongguan, China.

Phone: +86 769 - 82109991 Fax : +86 755 - 89602394

www.zkteco.com

